



# measuringmadeeasy

## Measuring a Victorian Conservatory for Wooden Venetian Blinds

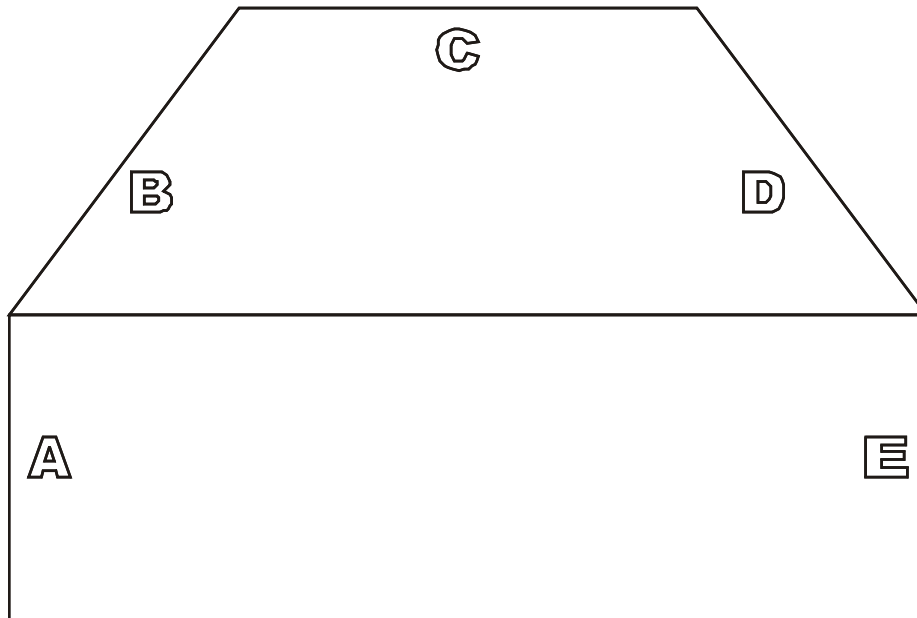

- Measure blind A & E from corner to corner and deduct 20mm from width. Mark as RECESS size.
- Measure blind B, C & D from corner to corner and deduct 40mm from width. Mark as RECESS size.

### Edwardian Conservatory

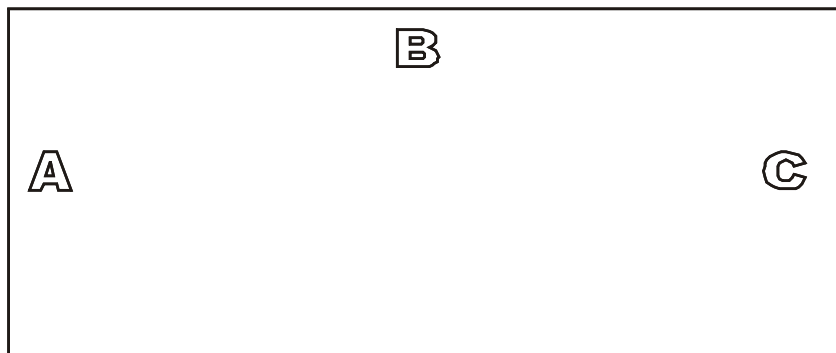

- Measure blind B from corner to corner. Mark as RECESS size.
- Measure blinds A & C from corner to corner and deduct 50mm from width. Mark as RECESS size.

Need Help? Phone our helpline:

**01204 854 112**



**blinds made easy**

quality made to measure blinds for the home