



measuringmadeeasy

Measuring a Bay Window for Roller Blinds

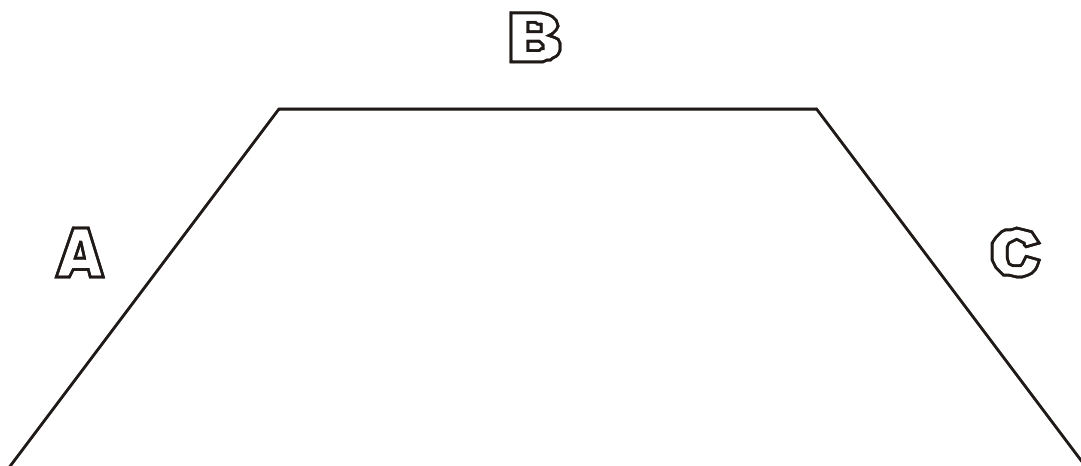

- Measure blind B from corner to corner. Deduct 32mm from width. Mark as RECESS size.
- Measure blind A & C from corner to corner but deduct 16mm from width. Mark as RECESS size.

Right Angle Bay Window

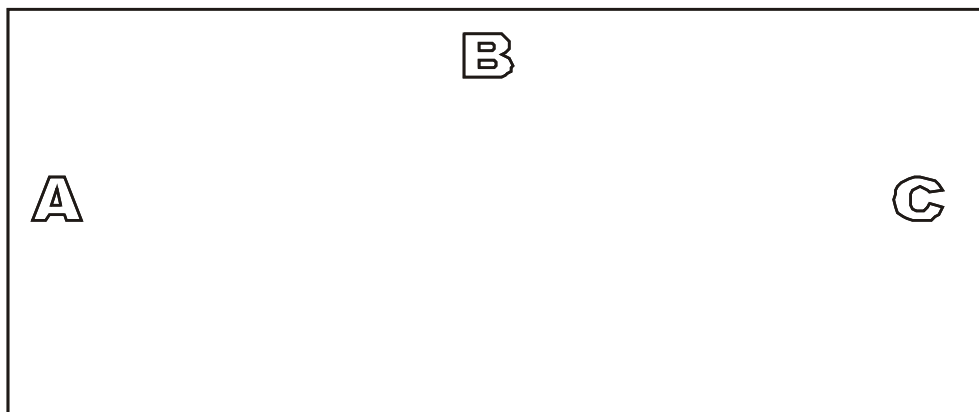

- Measure blind B from corner to corner. Mark as RECESS size.
- Measure blinds A & C from corner to corner and deduct 50mm from width. Mark as RECESS size.

Need Help? Phone our helpline:

01204 854 112



blinds made easy

quality made to measure blinds for the home