



# measuringmadeeasy

Measuring a Victorian Conservatory for Roller Blinds

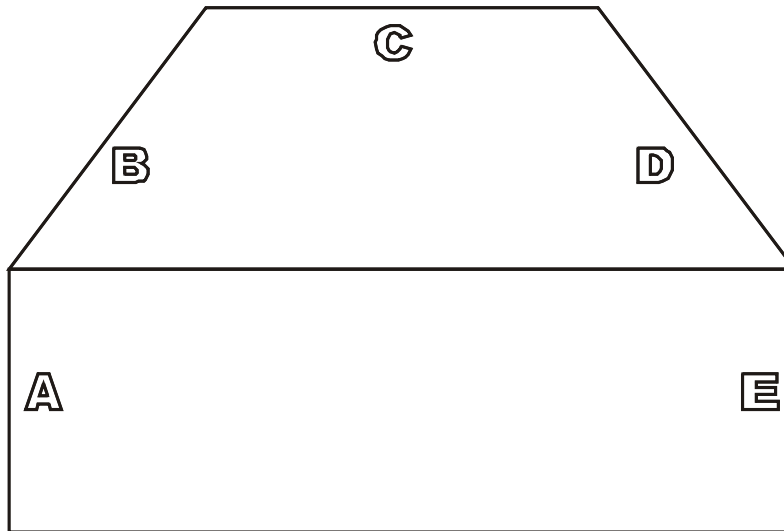

- Measure blind A & E from corner to corner but deduct 16mm from width. Mark as RECESS size.
- Measure blind B, C & D from corner to corner but deduct 32mm from width. Mark as RECESS size.
- Ask for reverse roll.

## Edwardian Conservatory

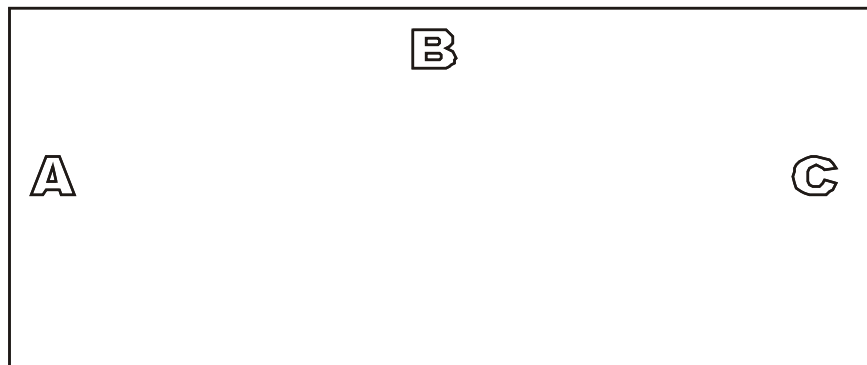

- Measure blind B from corner to corner. Mark as RECESS size.
- Measure blinds A & C from corner to corner and deduct 57mm from width. Mark as RECESS size.
- If using extension brackets deduct 70mm from width.

Need Help? Phone our helpline:

01204 854 112



blinds made easy

quality made to measure blinds for the home