



measuringmadeeasy

Measuring a Victorian Conservatory for Vertical Blinds

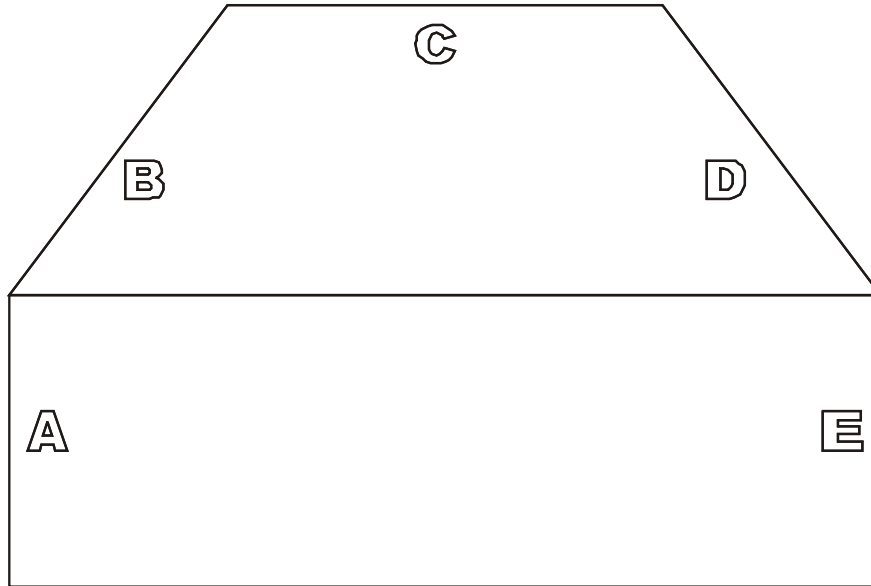

- Measure blind C from corner to corner. Mark as RECESS size.
- Measure blind A, B, D & E from corner to corner but deduct 32mm from width. Mark as RECESS size.
- If using 5" extension brackets deduct 57mm from width.

Edwardian Conservatory

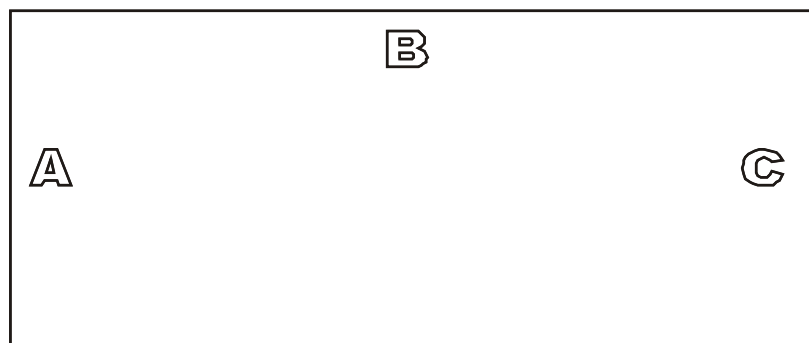

- Measure blind B from corner to corner. Mark as RECESS size.
- Measure blinds A & C from corner to corner and deduct 70mm from width. Mark as RECESS size.

Need Help? Phone our helpline:

01204 854 112



blinds made easy

quality made to measure blinds for the home