


# fittingmadeeasy

....for woodens....

You will receive with your blind

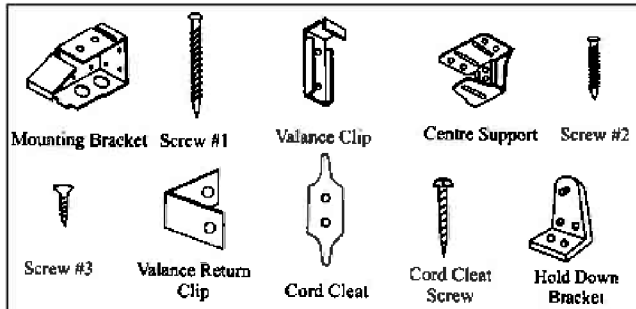

## Step 1


Decide whether to **face fix** the blind to the window frame or wall or **top fix** the blind to the lintel. If you are fixing your blind outside of the recess, make sure the blind is evenly placed.

## Step 2

Hold the brackets against the window the width of the blind (plus 6mm) apart and mark the holes with a pencil. Making sure to mark for face fix or top fix accordingly.




face fix

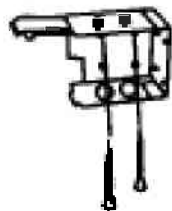

top fix


## Step 3

Fix the brackets to the wall/lintel using screw #1. Use the centre support if provided. Make sure the flaps open upwards on the box brackets.

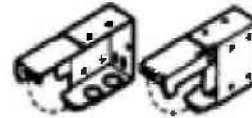


## Step 4

Push the headrail into the box brackets ensuring a snug fit. Close the flaps fully.

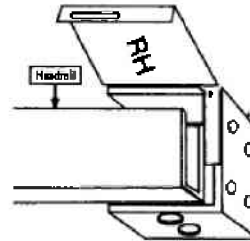

## Step 5

Lower the slats by moving the left hand cord to the left and pulling down gently to unlock the cords. Then slowly let the cords go and they will lower.


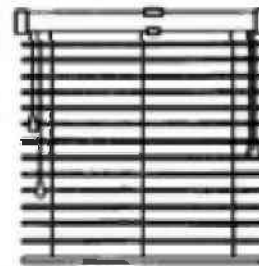


## Step 6

Attaching the valance. There are two ways to attach the valance to your headrail. Either using the clips provided or the Velcro we also include. If using the Velcro simply stick one side of the Velcro to the bracket and the other side to the appropriate place on the back of the valance and push together.

To use the clips follow these instructions:

Using screw #3 attach the valance clip to the valance as shown.

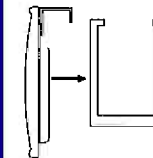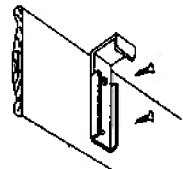

Hook the valance clip – with the valance attached – onto the headrail.

## Step 7

To use the hold down brackets, simply use screw #2 and attach the hold down brackets to a wall or window face ensuring the pins will fit securely into the holes on the end of the bottom rail.

Need Help? Phone our helpline:

01204 854 112



blinds made easy

quality made to measure blinds for the home