

fittingmadeeasy

....for verticals...


What you will need...

- minimum of 4 **screws** and 4 appropriately-sized **rawl plugs** if screwing into masonry
- a **screwdriver** to match your screws
- a **power drill**
- a **pencil**

Step One...(Please read all instructions before starting)

Inside Recess – Decide whether to fit to the window frame (**FACE FIX**), or whether to fit to the lintel (**TOP FIX**). We recommend **TOP FIX** if the window frame is **uPVC**, or if there are any **obstructions** in the way (catches, handles etc.)


Outside Recess – If fitting outside the recess, measurements C will need to be the same. To work out C, minus B from A and divide the answer by 2. Follow instructions for **FACE FIX**.

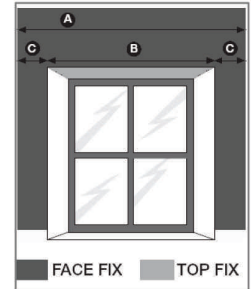

Step Two...

FACE FIX – Position brackets approx 5cm away from the end of the headrail. Mark holes on frame/wall with pencil, and then screw into place.



TOP FIX – Make a mark of any **protruding handles**. Mark the fitting position 6cm into the recess from the handles. Drill brackets into position 5cm away from the side walls.

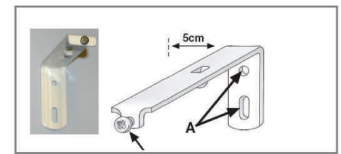

Step Three...


FACE FIX – With the Carriage C closest to you, hook the back of the headrail into the brackets. Tighten the short screws to lock the headrail in place.

TOP FIX – Tilt and hook the front of the headrail (carriage C closes to you) into the bracket. Press the back up into position until it clicks. Push B up to release blind.

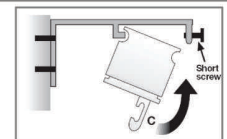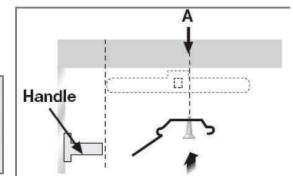

Step Four...

Once the headrail is securely fitted, adjust the metal chain so that the hangers are **fully open**. Open your cardboard box that's holding your drapes, and break open the plastic bag. Unravel the drapes and they are then ready to be **carefully** hung onto the headrail one at a time. If your blind is split draw, you may need to **carefully** cut your bottom chain in the middle of the blind.

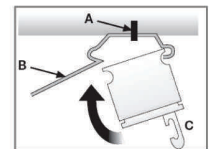

Final Steps...

You can adjust the **angle** of the drapes by using the **metal chain**. You can **open and close** the blind by using the **white control cord**, making sure the drapes are tilted open when doing so. Your verticals will only require **light dusting** and **occasional wiping down** with a **well wrung out cloth** (no detergent must be used). **Enjoy your blinds!**

WARNING: For safety reasons, please keep all cords and chains out of the reach of children. All beds, cots and other furniture need to be moved away from the blinds.

Need Help? Phone our helpline:
01204 854 112



blinds made easy
quality made to measure blinds for the home